

PAINTBALL CHRONO STATION INSTRUCTIONS

INSTALL BATTERY - any 6 volt spring terminal battery (#1209, #529, MN908, etc). Connect the alligator clips (red to +, black to -).

OPERATION - set on table with at least 6' of free space in front. Push red on/off button and 000 appears. Rest 1" to 3" of barrel on rubber, aim level, shoot, read, shoot, read i.e. auto update. Radar turns itself off if there is no activity. F = low battery. VELOCITY RANGE = 150 to 400 fps

RATE OF FIRE - rapid fire a 3 shot burst and radar reads out rate of fire if at least 04 balls/sec (locked in for 2 sec). RANGE = 04 to 25 bps

BEEPER ALARM - factory set to 300 fps but can be changed. Turn radar on. Push red button again and hold down 12 seconds until "P" appears. Release button and alarm setting appears. Push button again to roll settings up. Push button again to roll settings down. To lock in your new limit, hands off and wait for the "P" to disappear. ALARM RANGE = 200 to 350 fps in 5 fps increments.

RAMPING BPS - wait until marker ramps and then turn radar on.

PAINTBALLS ONLY - No arrows, bullets, pellets, airsoft.

WARRANTY - 90 days (USA only). Voided by shot/paint/water/rain/ drop damage.

REPAIRS - call for advice: 360-988-7801. Email: xradarusa@yahoo.com

CUSTOM CHRONOGRAPH, 1429 Finn Hall Rd, Port Angeles, WA 98362 ph 360-988-7801

